


GatorMat®

Crack Inhibiting Underlayment

Suggested Instructions for using Propex Fabrics GatorMat®

1. Do not begin until the slab has cured to proper specifications
2. Clean Slab of all dirt and debris
3. Apply **GatorMat® Glue** or approved outdoor carpet adhesive using 1/16" U-Notched trowel
4. Roll out GatorMat® fabric over adhesive
5. Allow to cure for a minimum of 2 hours
6. Install tile using tile manufacturer's recommended installation procedures

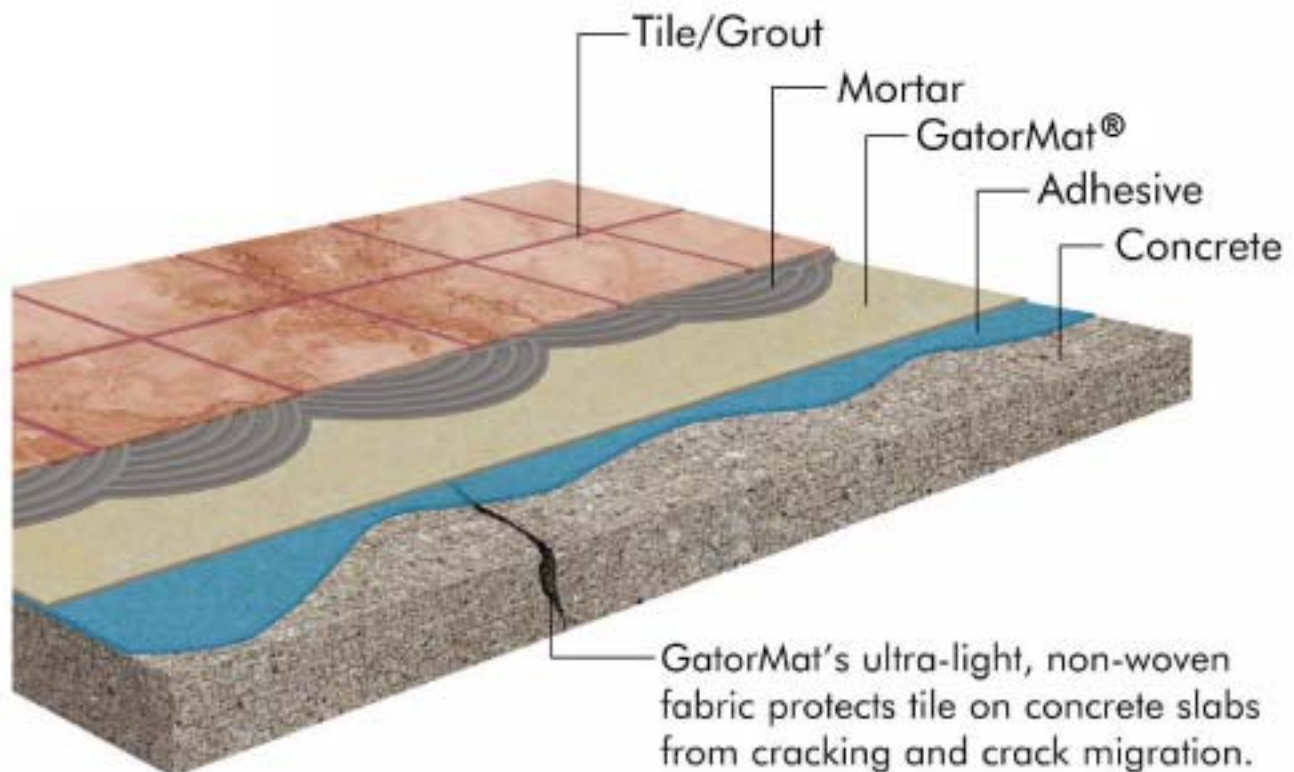

GatorMat[®]



**Adhesive Designed Specifically
to Install GatorMat[®] Crack
Isolation Membrane**

Glue

GatorMat[®] Glue is a premium performance solvent free adhesive with high performance characteristics you expect from a solvent based adhesive.

Directions for using GatorMat[®] Glue

1. Do not begin until the slab has cured to proper specifications
2. Clean slab of all dirt and debris
3. Apply **GatorMat[®] Glue** using 1/16" notched trowel
4. Roll out **GatorMat[®]** fabric over **GatorMat[®] Glue**
5. Allow to cure for a minimum of 2 hours
6. Install tile using tile manufacturer's recommended instructions

Trowel and Coverage



125 – 150 SF/Gallon depending upon surface texture

Restrictions

Concrete pH should not be above 9.5

Moisture level using ASTM F-1869 should not exceed 5 lbs. / 1000 s.f. / 24 hours

Freeze thaw stable to 10° F

**GatorMat[®] and GatorMat[®] Glue available through Propex Inc.
800-617-6796 Option #3**